
How Often do You Need to Change Filters for the Filter/Degasser?

The frequency at which the Filter Membrane has to be replaced is dependent on the sample's volume of undissolved particles. The more particles, the more frequently it has to be replaced and vice versa.

For relatively clean samples (e.g. mobile phases) you could change the membrane every 500 mL or so.



[Filter/Degasser Product Page](#)